



COOLEEDGE

COOLEEDGE TILE EXTERIOR ENCLOSED DRIVER INSTALL GUIDE

Please read instructions prior to installation


Installation must be completed by a qualified electrician in accordance with all national and local electrical and construction codes.

Ensure power is off prior to installation.

Coolledge TILE Exterior products are Wet Location rated. Not for use in submerged installations.

Coolledge TILE Exterior must be powered by a Coolledge-approved constant voltage Class 2 or LPS LED driver


Using a non-Coolledge approved power source could damage the system and will void the warranty

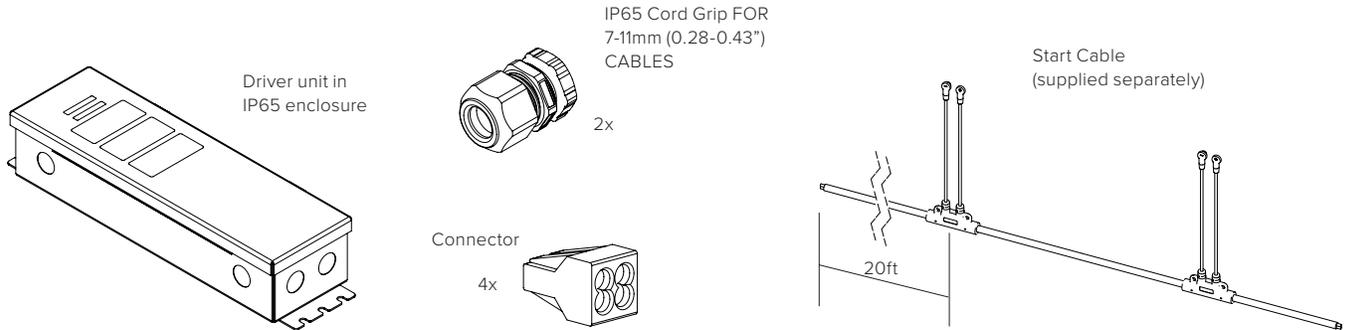

WARNING - DO NOT CONNECT the AC power directly to the Coolledge Exterior TILE. All AC connections are to be made within the LED driver enclosure

1. Mount the enclosed driver at the required location using appropriate fasteners. Ensure proper access is available to enable correct installation.
2. Punch out one knockout at the output end of the enclosure and install a provided cord grip. Install the TILE Exterior Starter Cable through the cord grip.
Note: second cord grip may not be used in all jurisdictions
3. Connect the black and white wires of the starter cable to the LED Driver output wires using the supplied connectors (or other method approved by local electrical codes). The red wire from the driver connects to the white wire from the starter cable. The black wire from the driver connects to the black wire from the starter cable.
4. Make the AC connection to the LED Driver using a method approved by local electrical codes.

Refer to TILE Exterior Install Guide

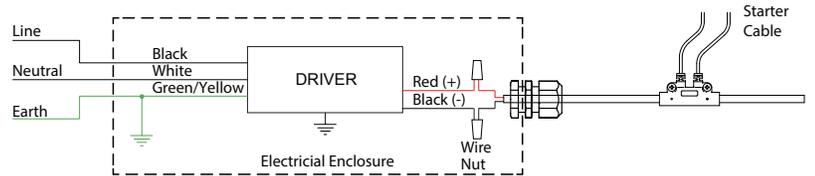

5. Connect the AC earth wire to the ground stud inside the driver enclosure.
6. Close the enclosure and tighten the lid-securing clamps.
7. Refer to TILE Exterior Install Guide for more detailed installation instructions.



EN 60598 Compliant (as a system)



RoHS



5 Year Limited Warranty:
Parts and workmanship

Coolledge Lighting Inc.
120-13551 Commerce Parkway
Richmond, BC V6V 2L1 Canada

O +1 604 273 2665
F +1 604 273 2660
T +1 844 455 4448
W cooledgeighting.com

Coolledge Lighting reserves the right to change materials or modify the design of its product without notification as part of the company's continuing product improvement program.

EXT-0055-R02 073018