
COOLEDGE TILE TNW EXTERIOR R3 - QUICKSTART GUIDE

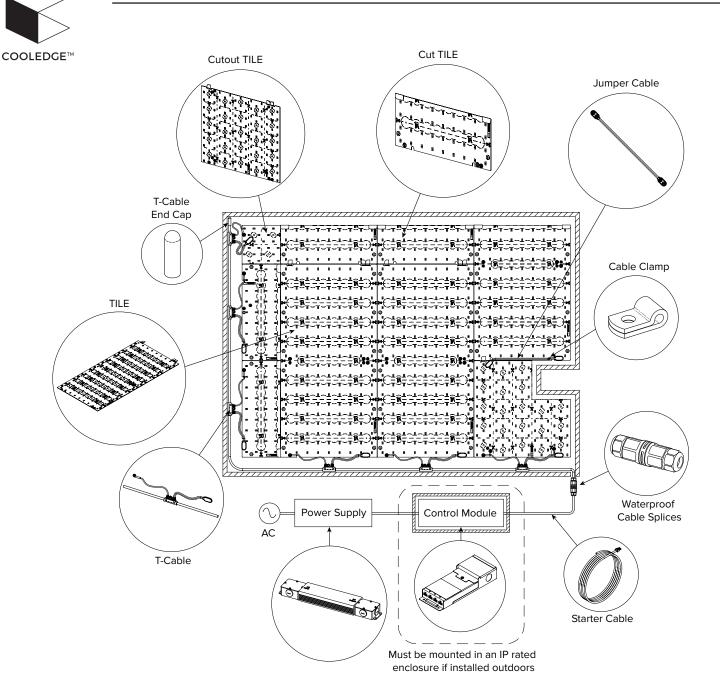

For detailed instructions, please refer to: - EXT-0102-R00 TILE TNW Exterior R3 Installation Guide



CE



RoHS



5 Year Limited Warranty: Parts and workmanship


Cooledge Lighting Inc. 110–13551 Commerce Parkway Richmond, BC V6V 2L1 Canada O +1604 273 2665 F +1604 273 2660 T +1844 455 4448 W cooledgelighting.com Cooledge Lighting reserves the right to change materials or modify the design of its product without notification as part of the company's continuing product improvement program.

INSTALL EXTERIOR TILE

NOTE: Mounting surface must be non-conductive (eg. drywall, plywood, etc)

connect light sheets

Snap together to

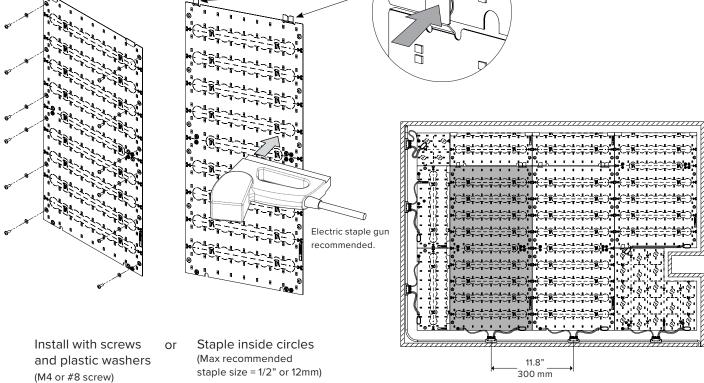



PRE-CUT EXTERIOR TILES AND CUTOUTS TILES


EXTERIOR TILES CANNOT BE CUT.

Cutting of the TILEs will compromise the protective coating.


Each TILE is cut according to the submittal drawing in the factory. Refer to the identification label on the back of each TILE and job submittal for the installation location.

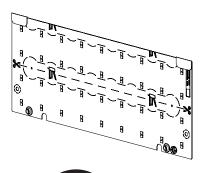

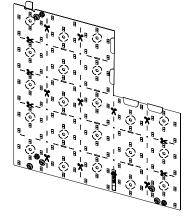

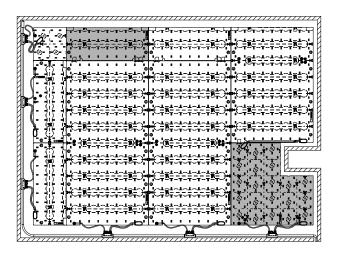


3 INSTALL CUT-OUT TILE IN CORNER

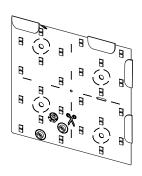


Install with screws and plastic washers. Do not use staples on the Cut-out TILE.


4 INSTALL CUT-OUT TILE(S)

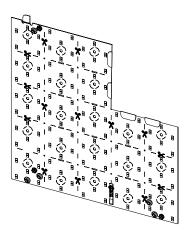


Install with screws and plastic washers. Do not use staples on the Cut-out TILE.

INSTALL T-CABLE AND CUT TO SIZE

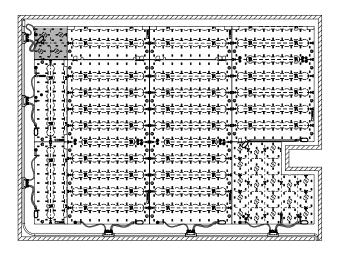


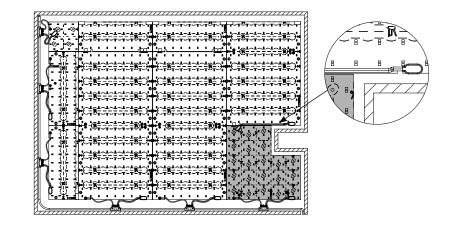

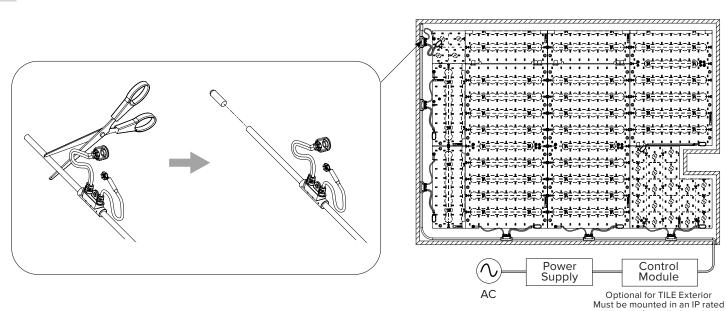


enclosure if installed outdoors


DO NOT BEND SHEETS SHARPLY AROUND CORNERS

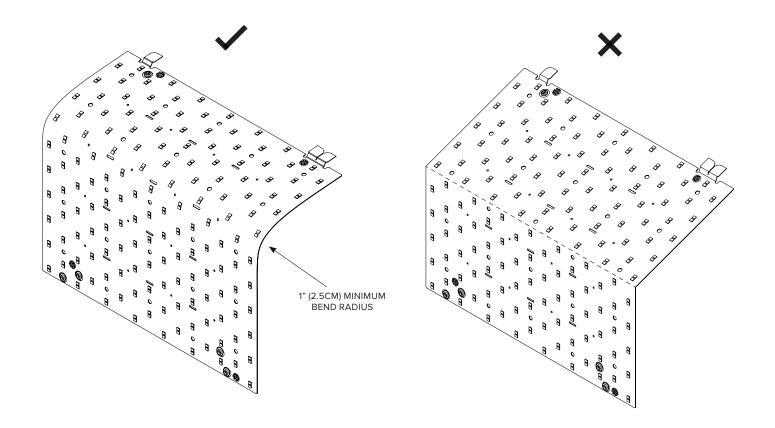

CONNECTOR TAB INSULATION


Cover any free hanging connector tabs with insulating tape.

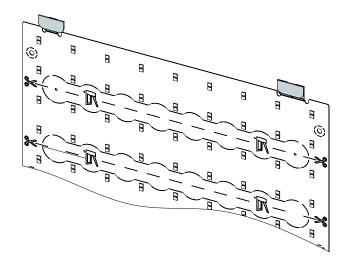

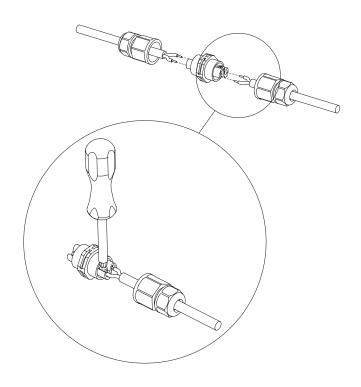


SPLICE CONNECTOR INSTALLATION

STARTER KIT CONTENTS

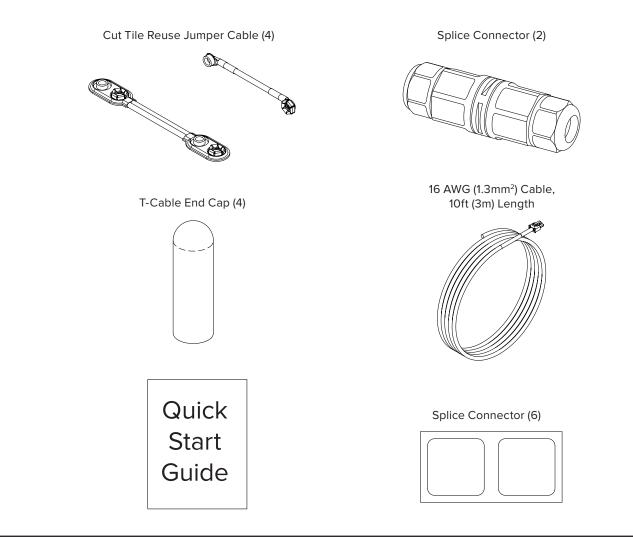

CUT-OUT KIT CONTENTS

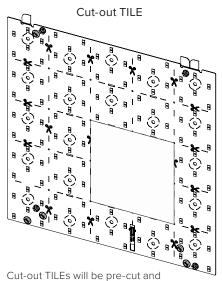

may not match the image shown.

