


COOLEdge

COOLEdge TILE EXTERIOR QUICK START GUIDE

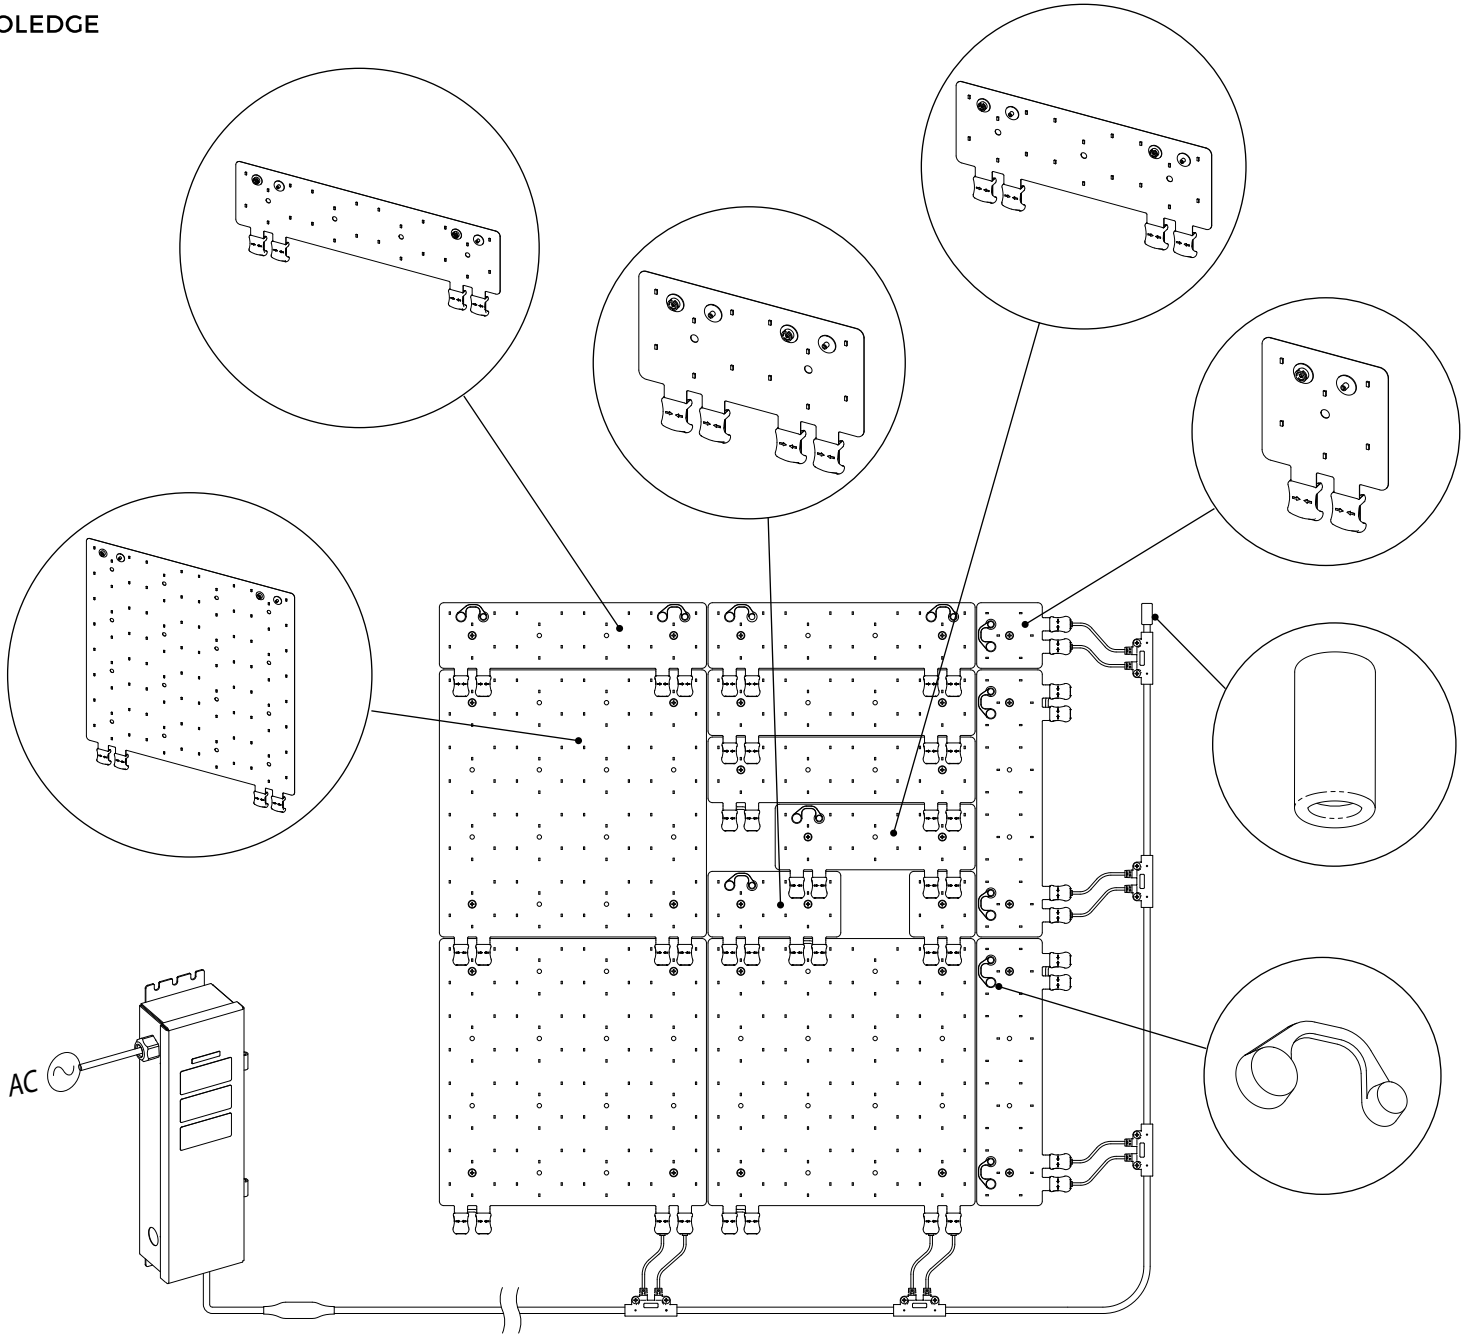

For detailed instructions, please refer to EXT-0054 Exterior TILE User Guide



EN 60598 Compliant





RoHS

IP65





5 Year Limited Warranty:
Parts and workmanship.



1

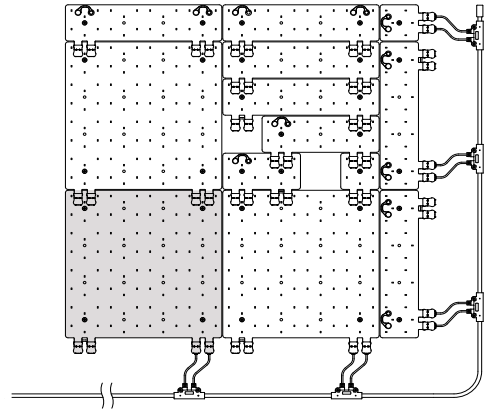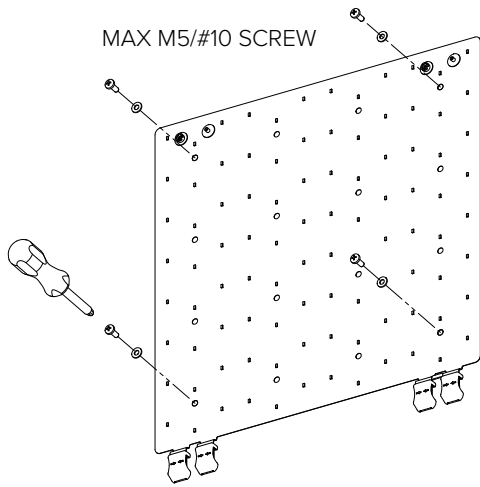



2

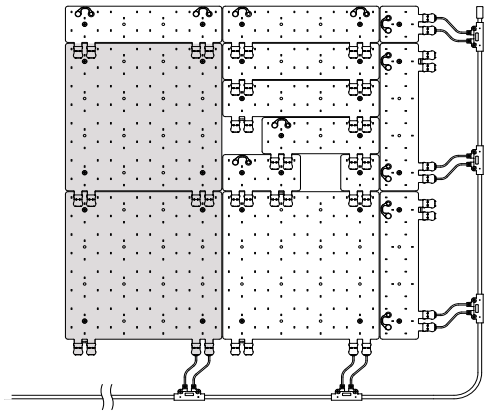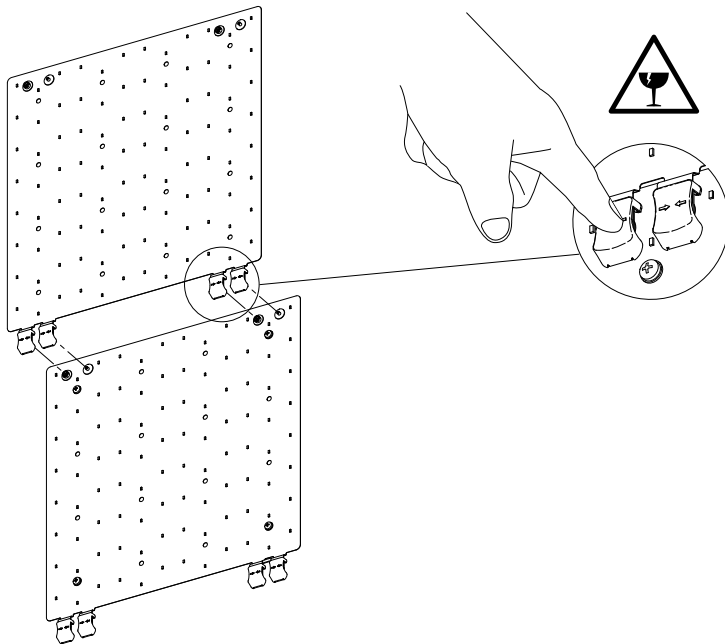



3

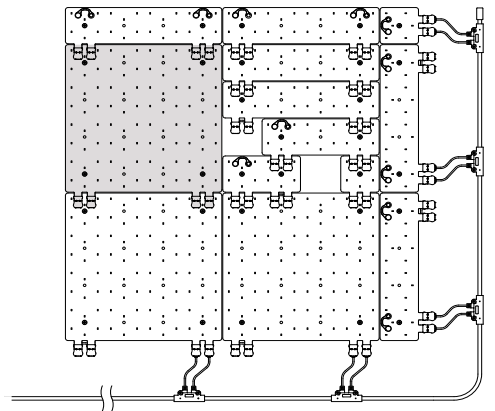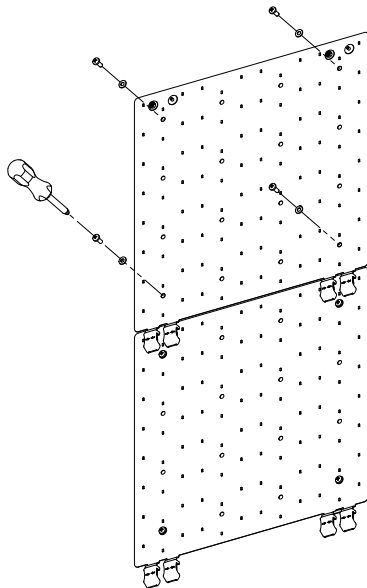



4

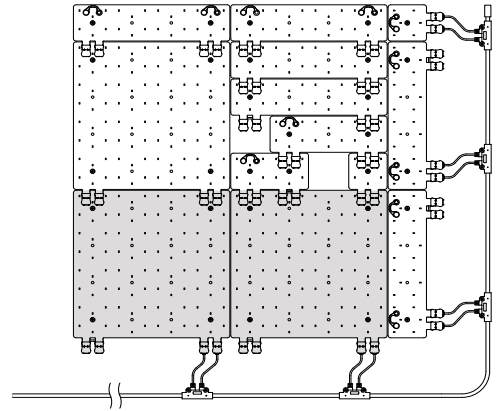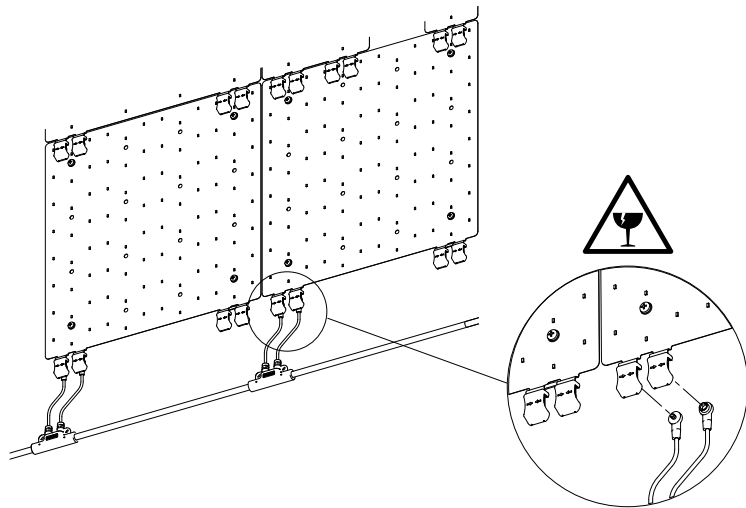

5

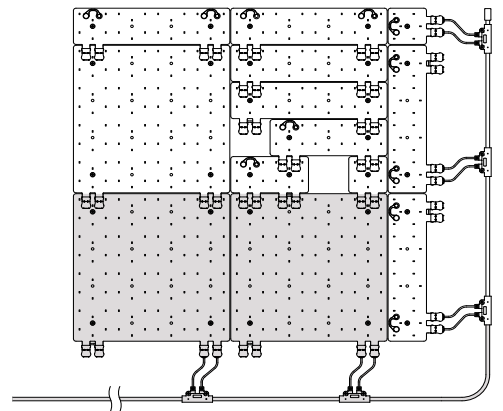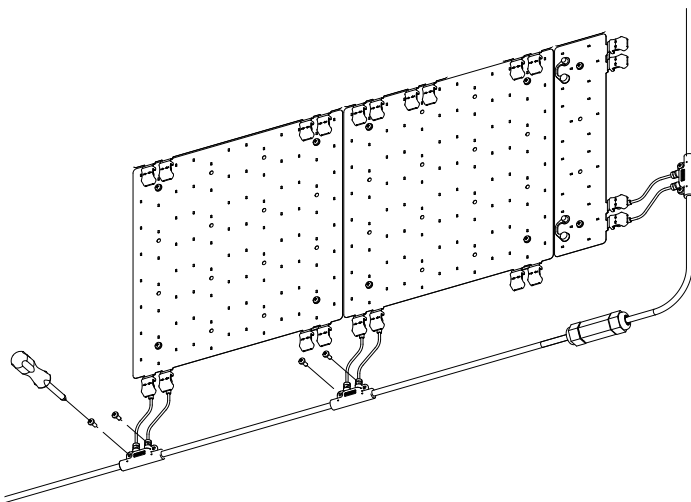



6

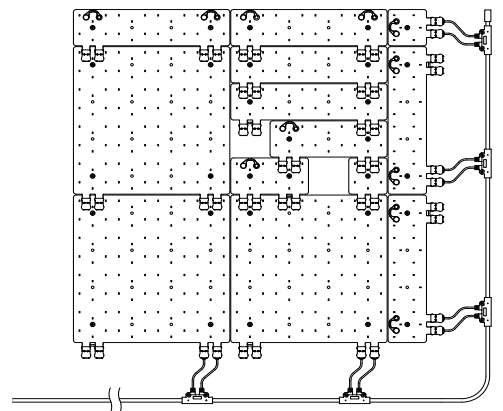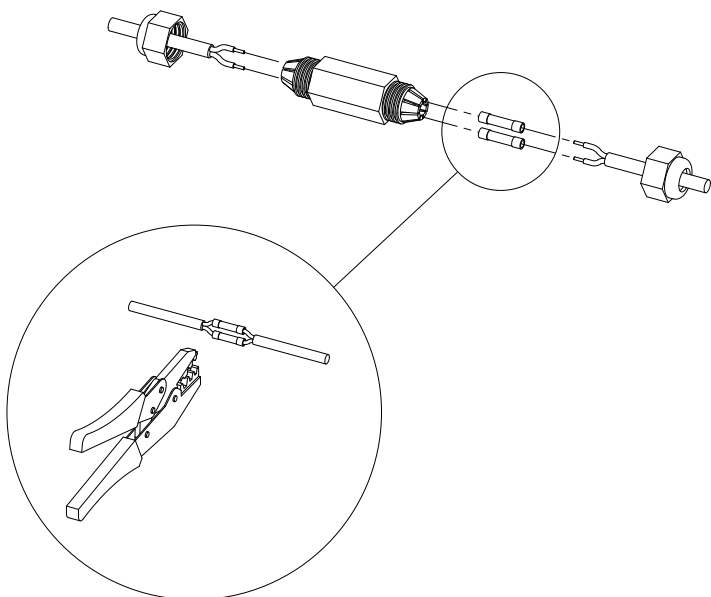



7



Cap all unused connectors

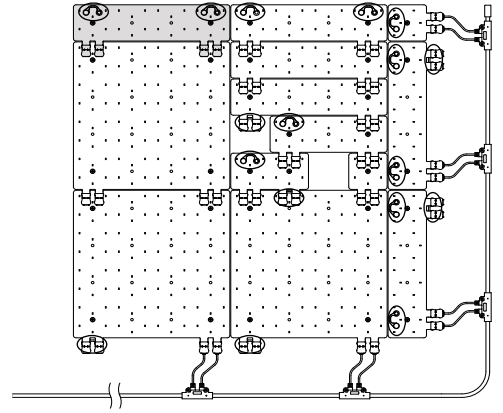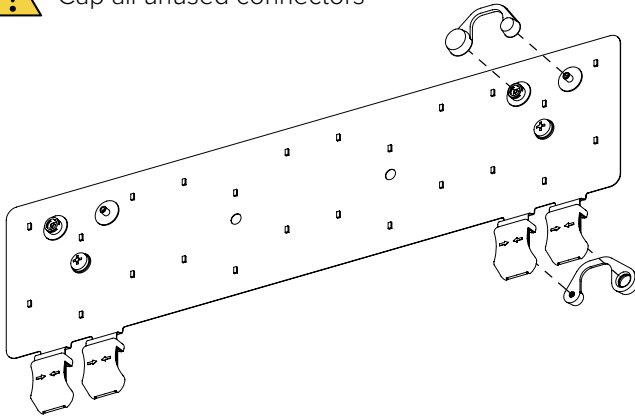

8

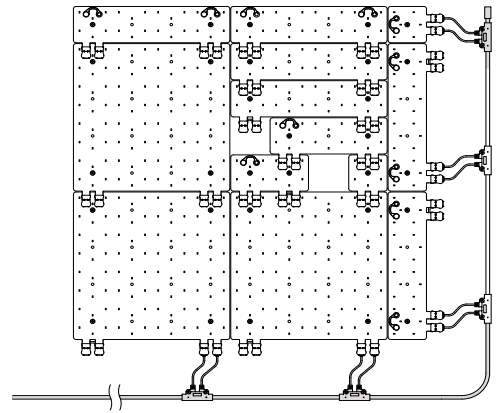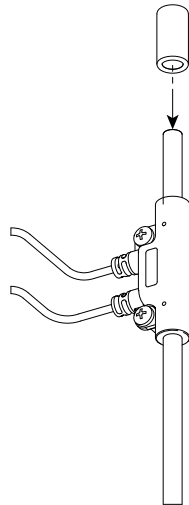

9



Risk of shock. Installation by a certified electrician.

See the TILE Exterior Driver Install Guide

