

For detailed instructions, please refer to:

- EXT-0071: Cooledge Control Module User Guide



Caution: Observe precautions for handling electrostatically sensitive devices.







RoHS




INSTALL TILE

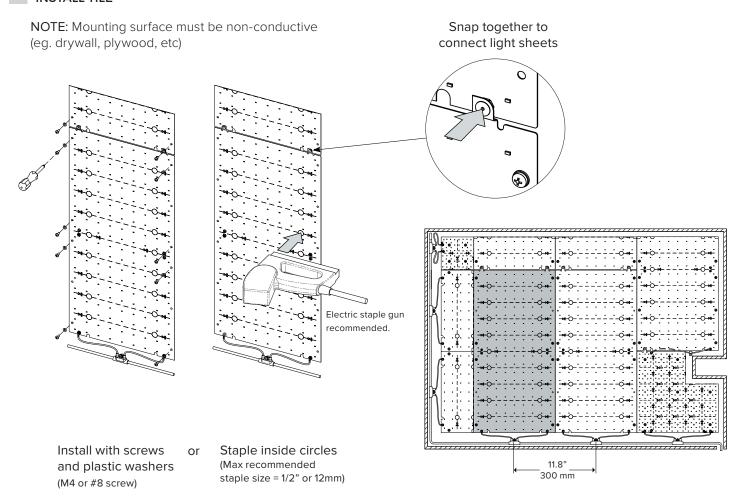


CUT TILES

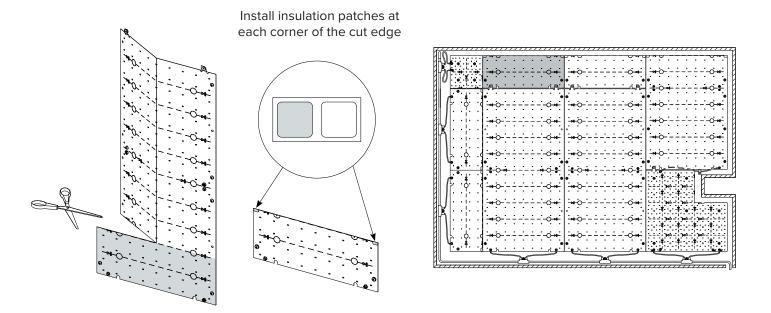


INSTALL CUT-OUT TILE IN CORNER

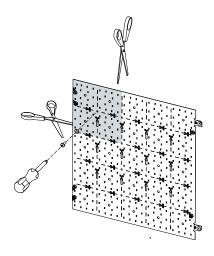


Install with screws and plastic washers. Do not use staples on the Cut-out TILE.

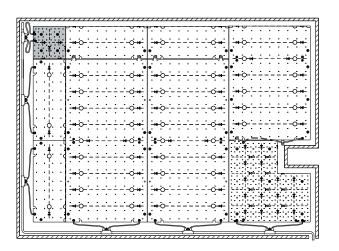


4 INSTALL CUT-OUT TILE(S)

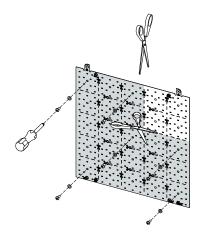


Install with screws and plastic washers. Do not use staples on the Cut-out TILE.

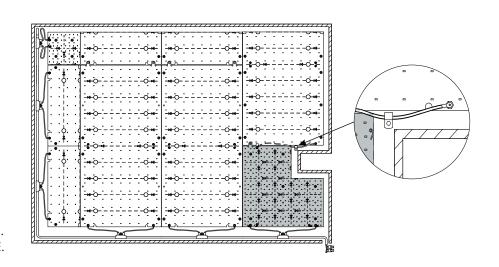


5 INSTALL T-CABLE AND CUT TO SIZE

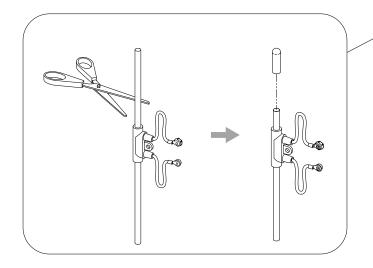


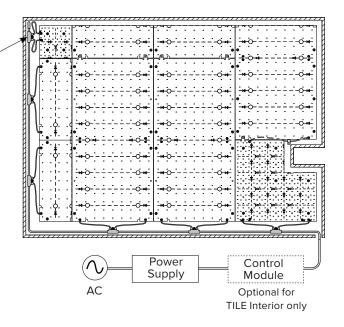


DO NOT BEND SHEETS SHARPLY AROUND CORNERS

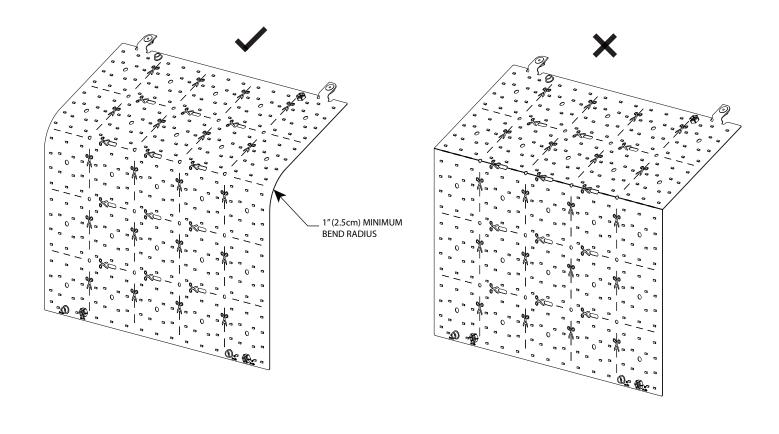



CUT-OUT TILE- ACCEPTABLE INTERNAL CUT-OUT CONFIGURATIONS (EXAMPLES)

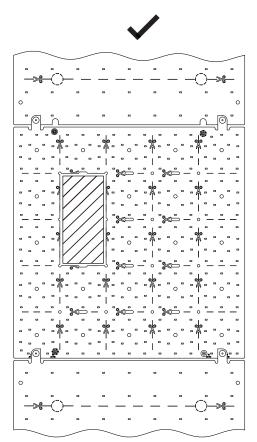


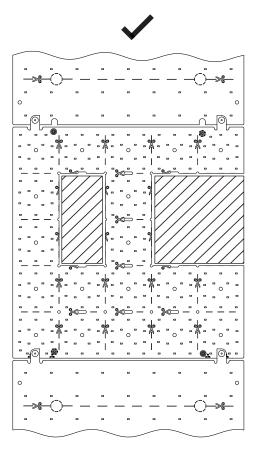


CUT-OUT TILE - ACCEPTABLE CORNER CUT-OUT CONFIGURATIONS (EXAMPLES)

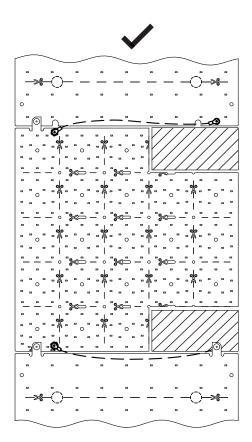


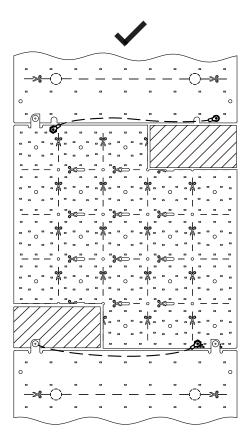

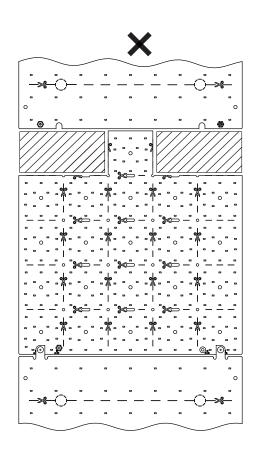

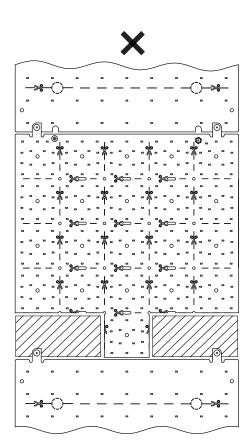

STARTER KIT CONTENTS

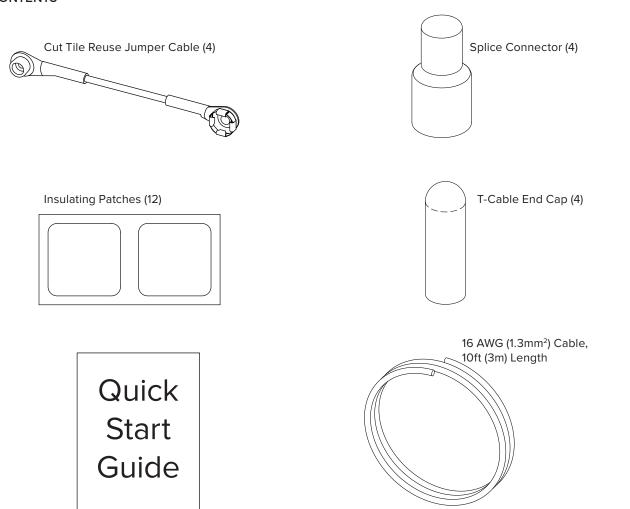

CUT-OUT KIT CONTENTS

